Instructions for creating the FSL+Applique Car Scents

These designs have been created on a single layer of water-soluble stabilizer, using a two-layer-lace base over two layers of tulle or organza. There are three parts to each design, the front, back, and scent container. The back of each design should be sewn first, set aside, and the front sewn to a specific point. The back is then placed on the back of the front and the sewing of the front design is then completed. The final border stitches attach the back securely to the front. Lining up the back "exactly" is very important in the final product. These little guys can be hung in an automobile, on a window, actually anywhere you want.



ATWNLS1212-5x7, ATWNLS1213-4x4, and ATWNLS1214-4x4: These three designs are required to complete the Owl hanging scent holder.


The back (ATWNLS1213-4x4) should be sewn first.

Required materials for the Owl back:


- Water soluble stabilizer-enough for 1 4x4 inch hooping
- Tulle (or organza) two 6 x 5.5 inch pieces
- Thread-choice of colors (I used light brown for all of the stitching.)



The Color Sequence Chart below will be referenced throughout these instructions.

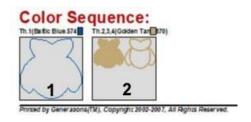

- 1. Hoop one layer of water soluble stabilizer.
- 2. Place the two pieces of tulle over the hoop, attach hoop to machine, and sew #1 in the Color Sequence Chart. These stitches will attach the tulle to the stabilizer.
- 3. Sew #2 in the Color Sequence Chart. These first stitches will create the double lace layer of the design. A color stop has been added to #3 in the Color Sequence Chart. The machine should stop after the double lace layer has been sewn.

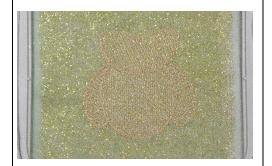

4. Remove hoop from machine and cut away the tulle from around the outside of the design.



5. Return hoop to machine and sew the remaining part of #3 in the Color Sequence Chart. These stitches will create a border around the design.



- 6. Remove the hoop from the machine and the project from the hoop. Do not cut away the stabilizer from the design as it will be needed to attach the back to the front of the design.
- 7. Set aside and work on the front of the design.



Creating the front (ATWNLS1212-5x7) of the Owl design.


Required Materials for Owl front:

- Water soluble stabilizer-enough for one 5x7 inch hooping
- Tulle (or organza) two 6 x 5.5 inch pieces
- Thread-choice of colors I used dark brown, light brown, orange, black, yellow, and white



3

The Color Sequence Chart below will be referenced throughout these instructions.

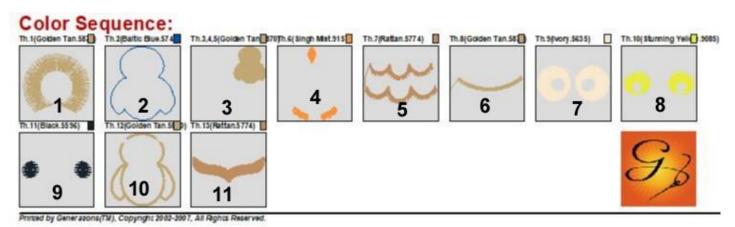

- 1. Hoop one layer of water soluble stabilizer.
- 2. Sew #1 in the Color Sequence Chart. These stitches will create the hanger for the design.



3. Remove hoop from machine and place the two pieces of tulle over the hoop-pin tulle in corners of hoop as shown in photo.



4. Attach hoop to machine, and sew #2 in the Color Sequence Chart. These stitches will attach the tulle to the stabilizer. (Because of the thread color, it is difficult to see the stitching, but an outline is created around where the design will be sewn.)



5. Sew #3 in the Color Sequence Chart. These stitches will create the double lace layer of the design.	
6. Sew #4 in the Color Sequence Chart. These stitches will create the beak and feet of the owl.	
7. Sew #5 in the Color Sequence Chart. These stitches will create the feathers on the front of the owl.	

8. Sew #6 in the Color Sequence Chart. These stitches will create the border between the head and body of the owl.	
9. Sew #7 in the Color Sequence Chart. These stitches will create the whites of the owl's eyes.	
10. Sew #8 in the Color Sequence Chart. These stitches will create the second part of the eyes.	

11. Sew #9 in the Color Sequence Chart. These stitches will create the pupils of the eyes.



12. Remove the hoop from the machine and cut away the excess tulle from around the design.



- 13. Turn the hoop upside-down.
- 14. Place the back part of the design (created earlier) over the back of the hoop. Line up the back **precisely** over the back of the front.
- 15. Use pins to hold the back in place, but make sure they are not in the sewing field of the design.



16. Return hoop to machine and sew #10 in the Color Sequence Chart. These stitches will create the border around the owl and attach the back to the front.

Front View





Back View

17. Sew #11 in the Color Sequence Chart. These stitches will complete the design by sewing the last part of the design, the upper part of the owl's head.

Back View





Front View

- 18. Remove hoop from machine and project from hoop.
- 19. Cut away most of stabilizer, as shown in photo, being careful not to cut any of the stitching.



- 20. Place owl into water to remove stabilizer.
- 21. Place design on paper towel-Blot to remove most of water.
- 22. Place between clean, white cloth, add weight on top and allow to dry.
- 23. One more step to complete the project- you will now create the scent container to fit inside the design.




Front




Creating the Scent Container for the Owl design (ATWNLS1214-4x4)

Required Materials for the Scent Container:

- Water soluble stabilizer-enough for one 4x4 inch hooping
- Tulle (or organza) two 3 x 5 inch pieces
- Thread-choice of colors I used light brown for the container

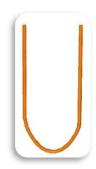

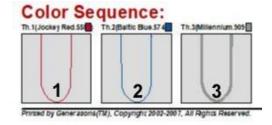

This Color Sequence Chart will be referenced throughout these instructions.

- 1. Hoop water soluble stabilizer in a 4 x 4 inch hoop.
- 2. Place the two pieces of tulle over the hoop and use pins to hold in place.



3. Sew #1 in the Color Sequence Chart. These stitches will attach the tulle to the stabilizer.



4. Sew #2 in the Color Sequence Chart. These stitches will reenforce the first set of stitches.



5.	Remove the hoop from the machine and cut away the tulle as seen in the photo. (Make sure to leave the top area uncut.)	
6.	Return hoop to machine and sew #3 in the Color Sequence Chart. These stitches will create a satin border around the bottom and sides of the container. The top is left open to allow it to be filled.	
7.	Remove hoop from machine and project from hoop. Cut away the stabilizer as shown in the photo.	
	Place the container into water to remove the remaining stabilizer. Blot on paper towel. Place between clean, white cloth and let dry. (If you are in a hurry, you can press the container with an iron—make sure you do not place the iron directly on the container, use a cloth over it.	

10. Once dry, create a funnel out of paper, open the two pieces of the container, place the funnel inside and pour in the "scents".(I used the vanilla Aroma Beads as show below. Purchased from


www.ScentDeals.com)







11. Fold the top sections as shown in the photo and hand stitch or use a straight stitch on a sewing machine.

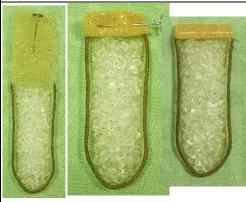

12. The scent container is ready to be inserted into your owl. Add a chain or ribbon to the top and the design is ready to hang, or give as a gift. These make great items to pop into greeting cards to those special people in your life.








The technique is the same for the other designs in this set, so use the instructions given in the previous pages to create the other designs. Color Sequence Charts of the other designs have been provided on the following pages along with notes as to when to cut the tulle and add the back to the design. Use the same sizes for tulle as shown in the instructions for the owl and component parts.


REMINDER-When sewing any of the designs, the back is the first to be stitched out!

ATWNLS1206-5x7 (Chick Front)

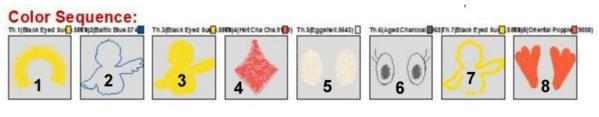


Cut away the tulle after sewing #6 in the Color Sequence Chart.

ATWNLS1207-5x7 (Chick Back)

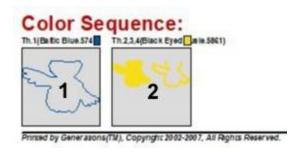


ATWNLS1208-4x4 (Chick Scent Container)

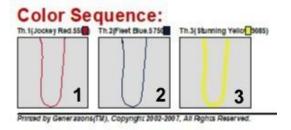


(Back) Cut away tulle after sewing the first part of #2 in the Color Sequence Chart.

ATWNLS1209-5x7 (Lion Front)

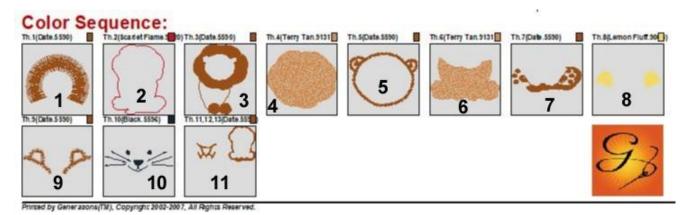


Cut away tulle after sewing the first part of #11 in the Color Sequence Chart. . Attach the back before sewing the final part of #11.

ATWNLS1210-4x4 (Lion Back)

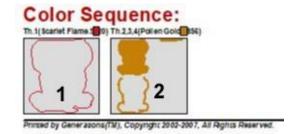


ATWNLS1211-4x4 (Lion Scent Container)

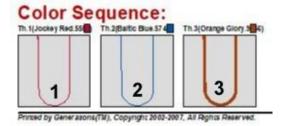


(Back) Cut away tulle after sewing the first part of #2 in the Color Sequence Chart. Attach the back before sewing the final part of #3.

ATWNLS1215-5x7 (Panda Front)

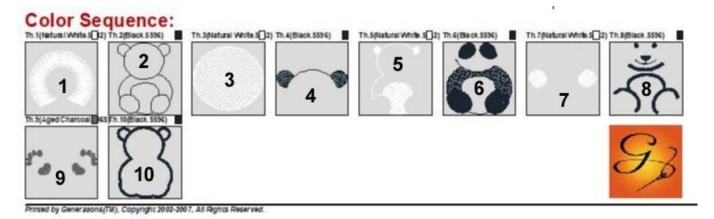


Cut away tulle after sewing #9 in the Color Sequence Chart. Attach back before sewing #10.

ATWNLS1216-4x4 (Panda Back)

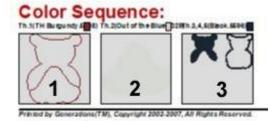


ATWNLS1217-4x4 (Panda Scent Container)

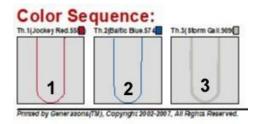


(Back) Cut away tulle after sewing the first part of #3 in the Color Sequence Chart.

ATWNLS1218-5x7 (Tiger Front)

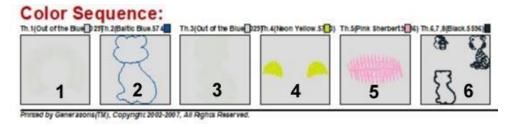


Cut away tulle after sewing the second part of #6 in the Color Sequence Chart. Attach the back before sewing the final part of #6.

ATWNLS1219-4x4 (Tiger Back)

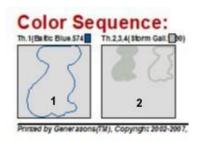


ATWNLS1220-4x4 (Tiger Scent Container)

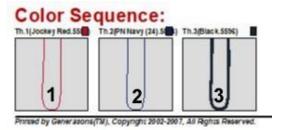


(Back) Cut away tulle after sewing the first part of #2 in the Color Sequence Chart.

ATWNLS1221-5x7 (Penguin Front)

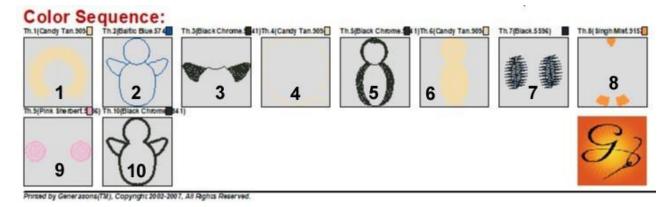


Cut away tulle after sewing #9 in the Color Sequence Chart. Attach the back before sewing #10.

ATWNLS1222-5x7 (Penguin Back)

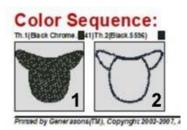




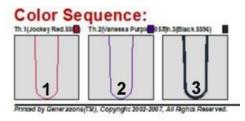


(Back) Cut away the tulle after sewing #1 in the Color Sequence Chart.

ATWNLS1224-5x7 (Elephant Front)

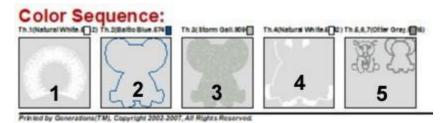


Cut away the tulle after sewing the first part of #5 in the Color Sequence Chart. Attach the back before sewing the last part of #5.

ATWNLS1225-4x4 (Elephant Back)

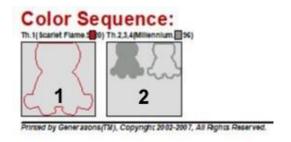


ATWNLS1226-4x4 (Elephant Scent Container)

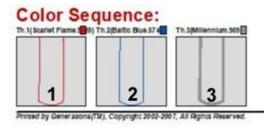


(Back) Cut away tulle after sewing the first part of #2 in the Color Sequence Chart.

ATWNLS1227-5x7 (Hippo Front)

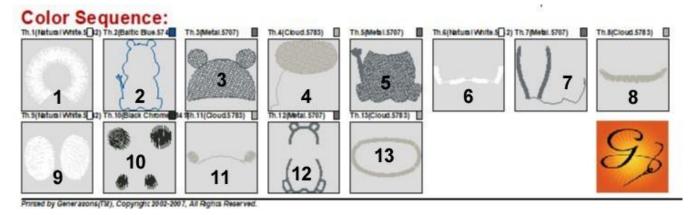


Cut away tulle after sewing #11 in the Color Sequence Chart. Attach the back before sewing #12 and #13 in the Color Sequence Chart.

ATWNLS1228-4x4 (Hippo Back)

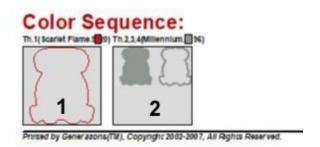

ATWNLS1229-4x4 (Hippo Scent Container)

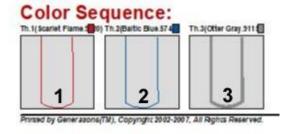

(Back) Cut away tulle after sewing the first part of #2 in the Color Sequence Chart.