Vinyl-Cell-Phone-Pockets-6x10-Clip-NLS

Designs used on phone pockets are from Clipartopolis: Ink-Spring-Bookmarks These cell phone pockets were designed to fit two sizes of phones: Smaller size (3 x 6 inches) and the little larger size (3.5 x 6.5 inches).

Two methods were used to attach straps some of which were made of fabric and others made of vinyl. Both are shown in the instructions that follow.





Smaller Size Pockets





Larger Size Pockets

ATWNLS1418-6x10 Large	ATWNLS1419-6x10 Small	
ATWNLS1420-6x10 Large	ATWNLS1421-6x10 Small	
ATWNLS14122-6x10 Large	ATWNLS1423-6x10 Small	
ATWNLS1424-6x10 Large	ATWNLS1425-6x10 Small	

The size of the two designs differ slightly in width, but the same size of vinyl and fabric can be cut for both.


Project Size	Fabric	Vinyl	
Larger size pocket	1 cut at 5.25 x 8.25 inches (back lining)	1 cut at 5.25 x 8.25 inches (back)	
(3.5 x 6.5 inch phone)	1 cut at 5.25 x 6 inches (front lining)	1 cut at 5.25 x 6 inches (front)	
and Smaller size pocket	*1 cut at 1.5 x 28 inches (strap)	*1 cut at 1 x 28 inches (strap)	
(3 x 6 inch phone)			
*For the strap, cut vinyl or fabric- not both .			

Two methods of strap attachment were used on my samples; Kam Snaps and Swivel Hooks.

ATWNLS1418-6x10 design will be used in these instructions.

The Color Sequence Chart below will be referenced throughout these instructions.



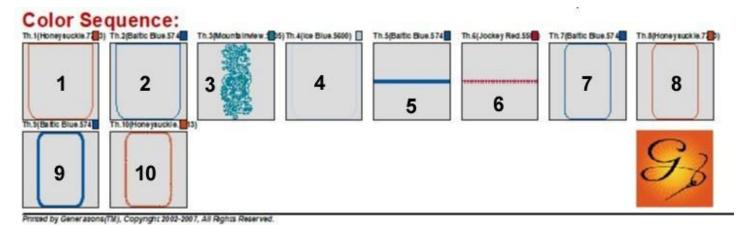

1. Cut the fabric and vinyl for project as indicated in the chart at the top of this page.



	Hoop one layer of water-soluble stabilizer in a 6 x 10 inch hoop.	
	Send design to embroidery machine, attach hoop, and sew #1 in the Color Sequence Chart. These stitches will create the placement stitches for the front of the project.	
	Place the 5.25 x 6 inch piece of vinyl over the placement stitches.	
5.	Sew #2 in the Color Sequence Chart. These stitches will attach the vinyl piece to the stabilizer.	

6. Sew #3 in the Color Sequence Chart. These stitches will create the design on front of the project. 7. Remove hoop from machine, turn up-side down, and place the 5.25 x 6 inch fabric piece over the back of the hoop-line up with vinyl on front. 8. Secure with tape. 9. Return hoop to machine and sew #4 in the Color Sequence Chart. These stitches will attach the fabric piece to the project. 10. Remove hoop from machine and cut away the TOP fabric from the back of the hoop as shown in the photo.

11. Turn hoop to right-side and cut away vinyl from TOP as	
shown in photo.	
12. Return hoop to machine and sew #5 & #6 in the Color	
Sequence Chart. These stitches will create the satin border across the top and a blanket stitch on top of the	
satin to secure satin stitches.	
	No. of the last of
13. Sew #7 in the Color Sequence Chart. These stitches will	
create the placement stitches for the back of the project.	
14. Remove hoop from machine and place the 5.25 x 8.25	10001691
inch piece of fabric, right side down, on back of the hoop.	9069
15. Place the 5.25 x 8.25 inch vinyl piece, right side up, over	000
the fabric piece on back of the project.	
	506
16. Secure with tape.	


17. Return hoop to machine and sew #8 in the Color Sequence Chart. These stitches will attach the back vinyl and back fabric piece to the project.	
18. Remove hoop from machine and cut away the vinyl from around the back of the project.	
19. Cut away the excess fabric from around the back of the design.	
20. Turn hoop over and cut away excess vinyl from the front of the project.	

21. Return hoop to machine and sew #9 and #10 in the Color Sequence Chart. These stitches will create the satin border around the project and a blanket stitch on top of the satin border.	
22. Remove hoop from machine and carefully cut away the stabilizer at the top of the project.	
23. Remove project from hoop and cut away stabilizer from around the projectleave about ¼ inch to avoid accidently cutting the border stitches.	
24. Use a wet paper towel, cloth, or Q-Tip to remove the remaining ¼ inch of stabilizer.	

- 25. Let dry and your phone pocket is ready for you to add the strap.
- 26. If you use a **fabric strap** cut fabric as indicated in the table at the beginning of these instructions. Fold and press in half, then fold each side to the center pressed line and press again. Un- fold the strap and fold the raw edge ends inward and upward-press again. Using a sewing machine, sew two lines of stitching down the outside of the strap. You will need two sets of Kam Snaps to attach the strap to the phone pocket. Follow the application instructions that came with the Kam Snaps.
- 27. If you choose to use a vinyl strap, cut the vinyl as indicated in the table at the beginning of these instructions. Fold the vinyl in half and using a sewing machine, sew a decorative stitch down the middle to secure the strap. Kam Snaps or Swivel Hooks can be used on the vinyl straps. You will need two Swivel Hooks and two eyelets (or grommets). Thread the strap through the Swivel Hook and tack down to hold-I used a regular sewing machine stitch to attach the hooks. The eyelets are the type you would use on belts to re-inforce the belt holes. Grommets can also be used in place of the eyelets and come in various sizes. If you use eyelets or grommets, follow the instructions that come with themusually on the back of the bubble-card to which they are attached.






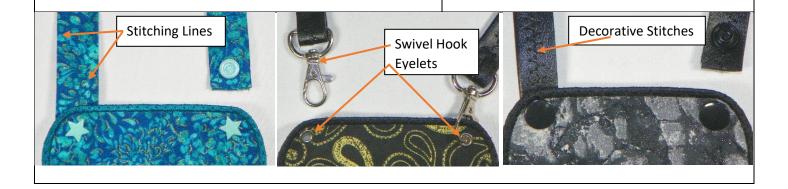


All of the projects are sewn in the same way. There are four different designs and two different project sizes.


ATWNLS1419-6x10

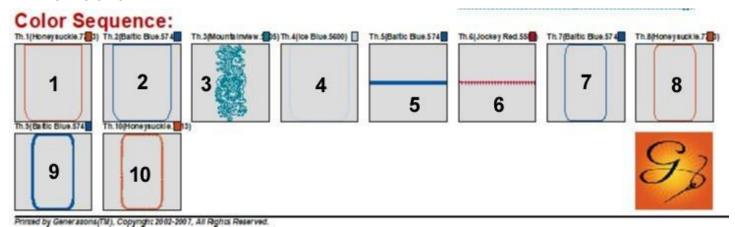


ATWNLS1420-6x10

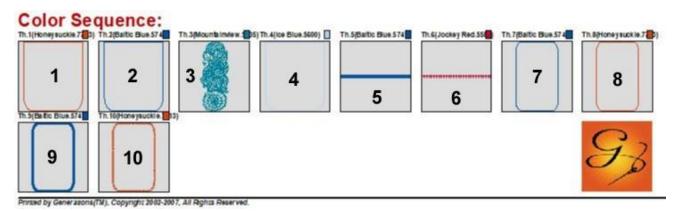


ATWNLS1421-6x10

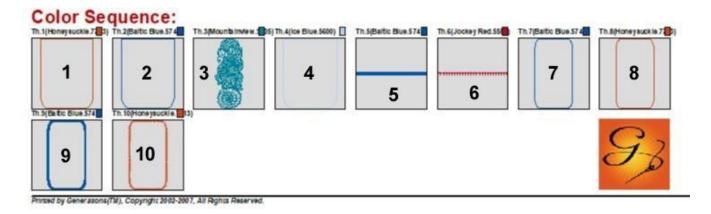

ATWNLS1422-6x10

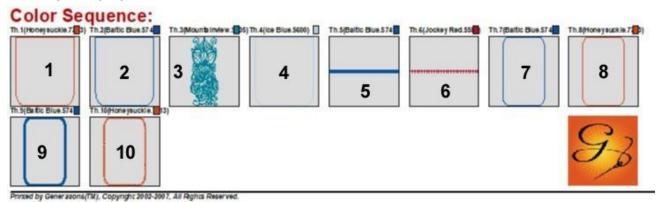


ATWNLS1423-6x10

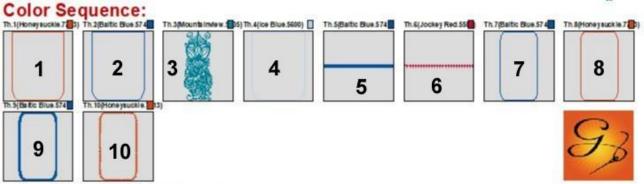


Printed by Generazons(TM), Copyright 2002-2007, All Rights Reserved.

ATWNLS1424-6x10

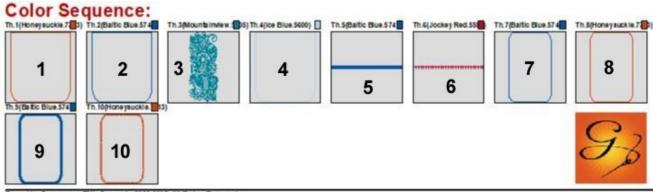

Printed by Generazons (TM), Copyright 2002-2007, All Rights Reserved.

ATWNLS1425-6x10

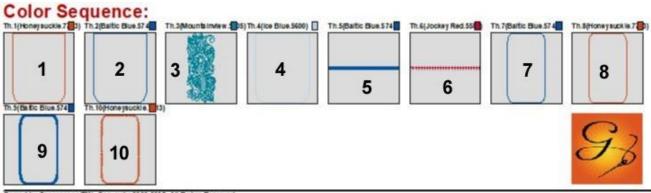

Printed by Generations(TM), Copyright 2002-2007, All Rights Reserved.