
Pay attention this is a universal instruction.

This instruction will work with most of my key fobs. So the patterns in the photo may be different (I'm sorry). But Photos with this purchased design will be placed next.


Necessary materials.

I use eco-leather and vinyl leather with a thickness of 0.6-0.85 mm

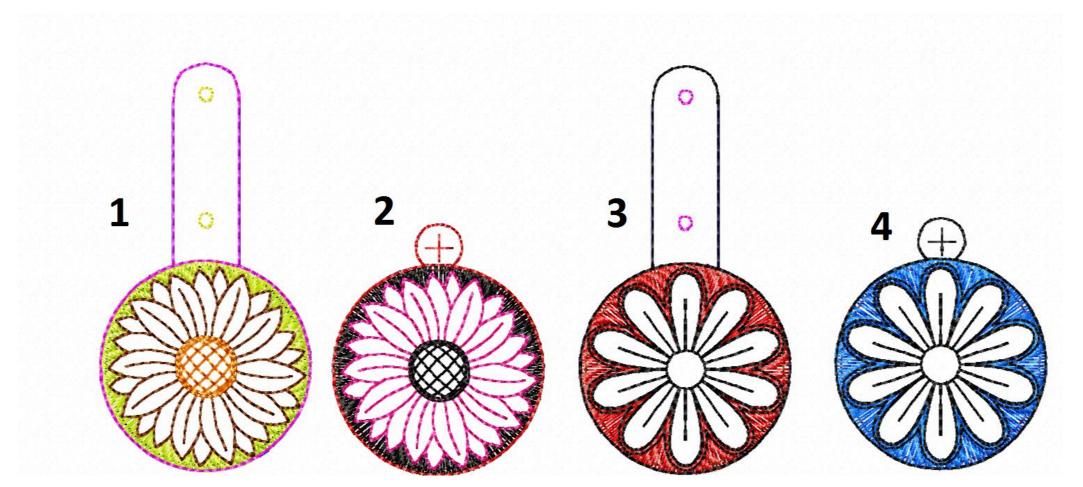



File 12 Hoop tearaway or cutaway stabilizer of medium density. Stitch Color 1 Put polyester batting. Optional. You can skip this step. But there will be no volume. 2 options for comparison


Stitch Color 2 You can skip this step. But there will be no volume.	
Cut off the exceed the polyester batting around near stitch.	

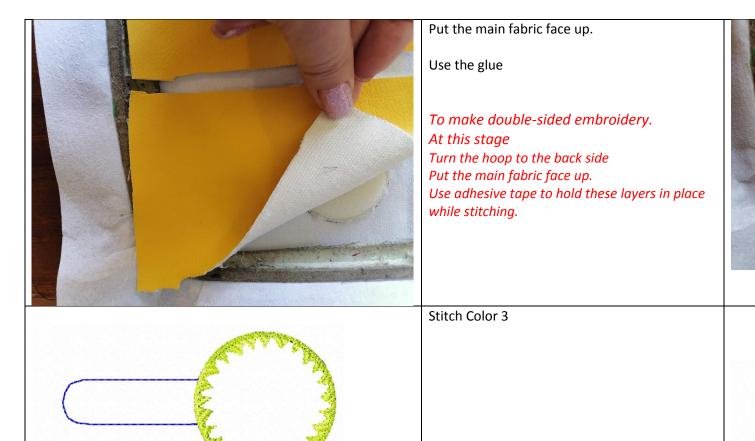




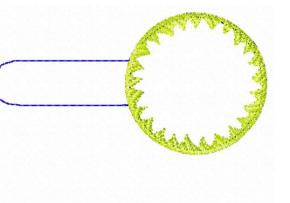

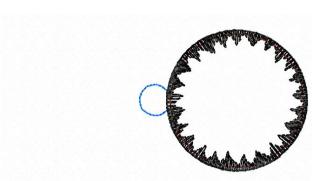

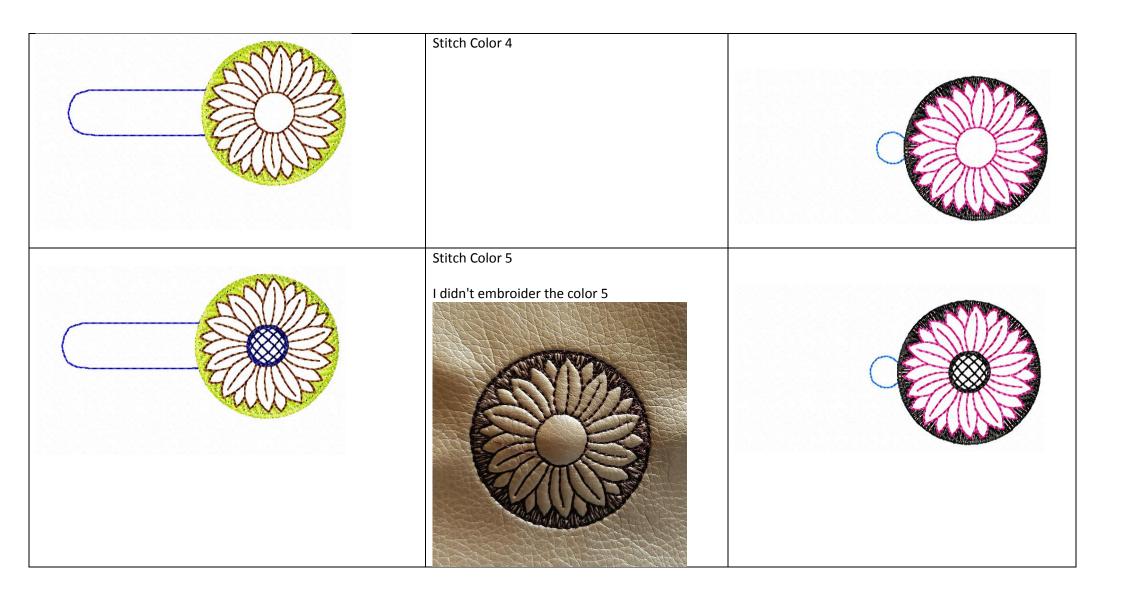

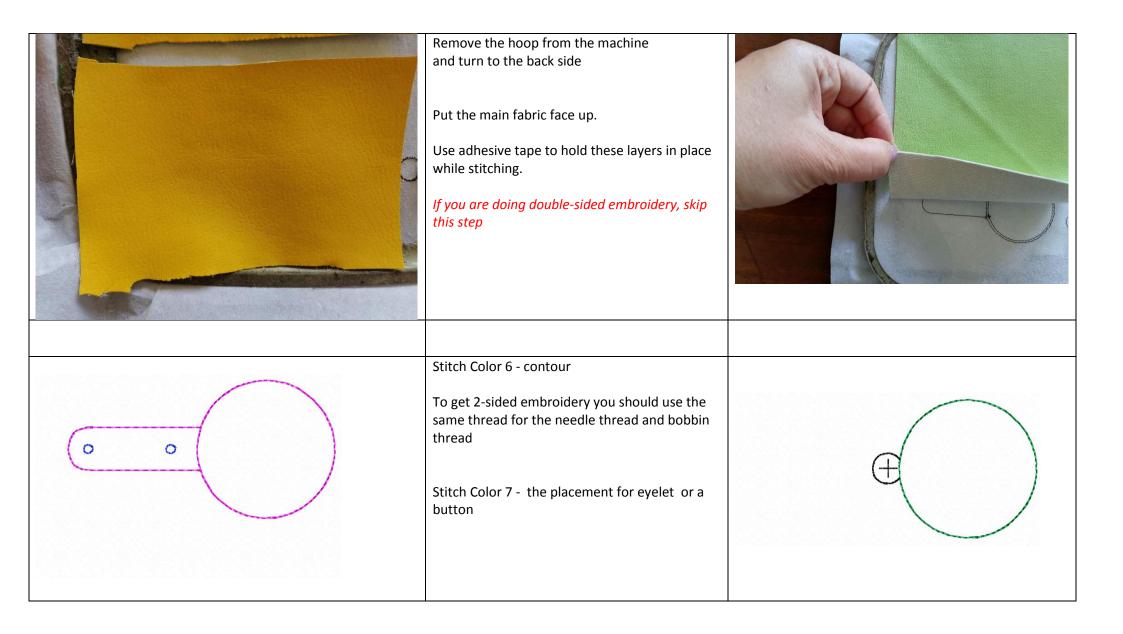

Optional

Before I p

Before I put the main fabric, I added a loop. And did not embroider the color 7








Trim the seams to about 2-3 mm. Add the eyelet or a button

File 3 4 Hoop tearaway or cutaway stabilizer of medium density. Stitch Color 1 Put polyester batting. Optional. You can skip this step. But there will be no volume. 2 options for comparison

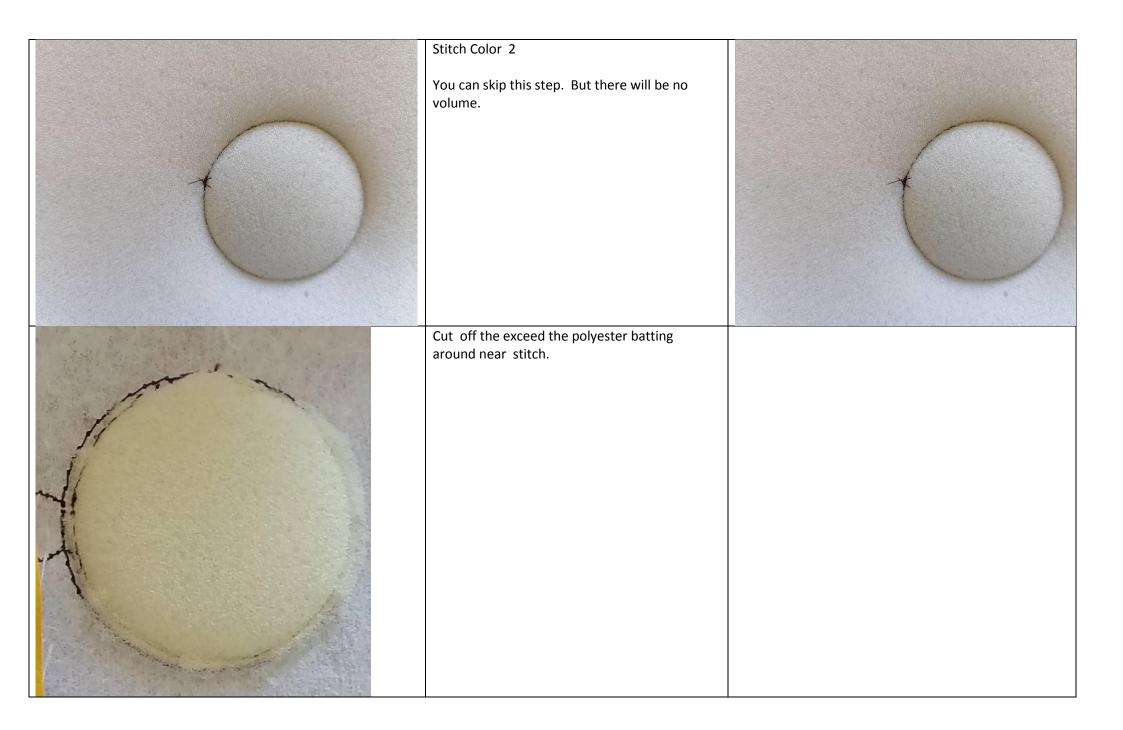




Put the main fabric face up.


Use the glue


To make double-sided embroidery.
At this stage
Turn the hoop to the back side
Put the main fabric face up.
Use adhesive tape to hold these layers in place while stitching.



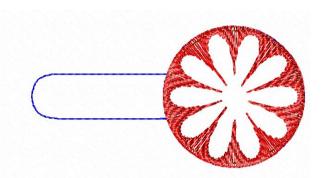


Stitch Color 3

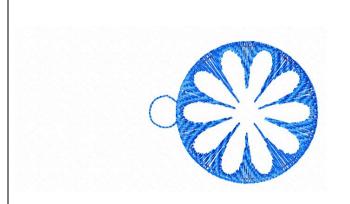

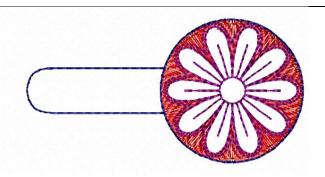

Stitch Color 4

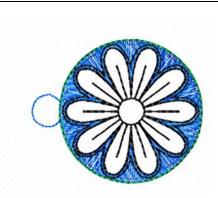




Remove the hoop from the machine and turn to the back side

Put the main fabric face up.

Use adhesive tape to hold these layers in place while stitching.

If you are doing double-sided embroidery, skip this step



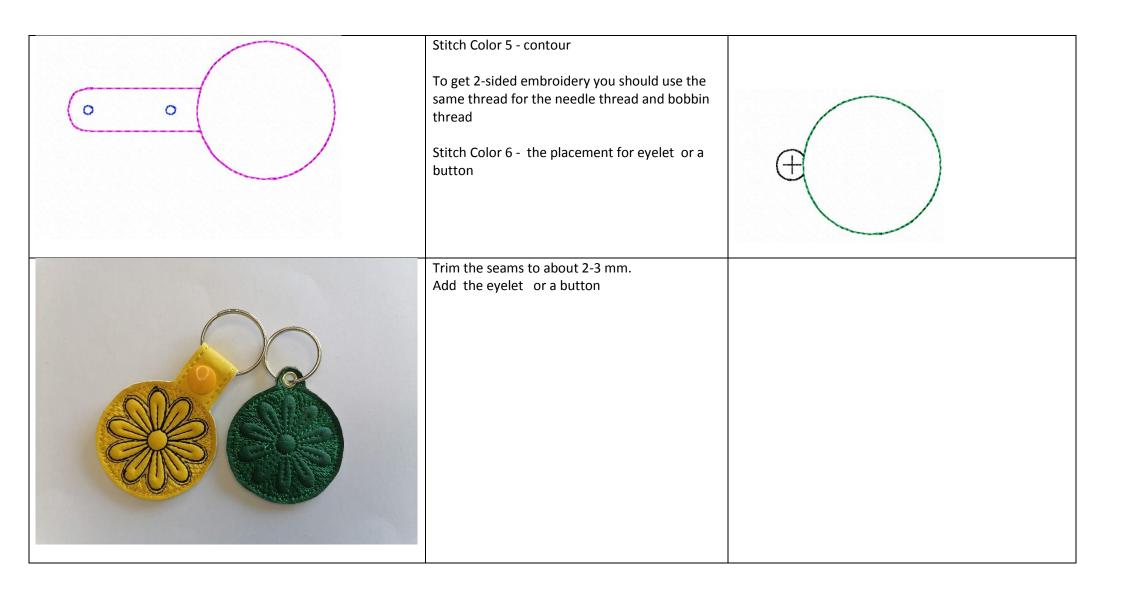



Thank you for your purchase.

I hope you liked my design.

Also in my store.







