
FSL-3D-Tulle-Butterfly-4x4-NLS

Instructions


There are two parts to this butterfly project; top-small-butterfly and bottom-larger butterfly. The filenames are shown in the chart below.

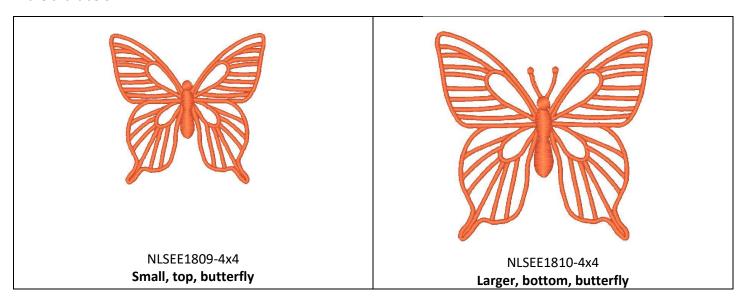

Materials/Cutting Chart

| Materials | Number & Size of Cuts |
|--------------------------|--|
| Tulle | 2 cuts at 4x4 inches |
| Water-soluble Stabilizer | Enough for 2 hoopings in 4x4 inch embroidery hoop |
| Hot Glue | Small dot to glue body pieces together |
| Threads | Choice of colors-Bobbin & Needle thread same color |

The Color Sequence Chart below will be referenced throughout these instructions.

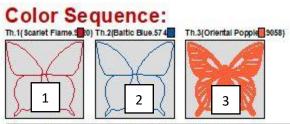

Printed by Generations (TM), Copyright 2002-2007, All Rights Reserved.

- 1. Cut two pieces of "glitter tulle" (Organza can also be used-just cut 1 piece).
- 2. Hoop water-soluble stabilizer in a 4x4 inch embroidery hoop, attach to embroidery machine and transfer design file to machine (NLSEE1809-4x4).
- 3. Thread needle and bobbin with same color thread.
- 4. Sew #1 in the Color Sequence Chart. These stitches will create the placement stitches.
- 5. Remove hoop from machine, place on flat surface and place the two layers of "glitter tulle" over the placement stitches. Secure with tape.

- 6. Return hoop to machine and sew #2 in the Color Sequence Chart. These stitches will attach the tulle to the stabilizer.
- 7. Remove hoop from machine and carefully cut away excess tulle from around the design.
- 8. Return hoop to machine and sew #3 in the Color Sequence Chart. These stitches will complete the satin stitches of the design.
- 9. Remove hoop from machine and project from hoop.
- 10. Cut away stabilizer from around the design. Leave at least ¼ inch to prevent cutting stain stitches.
- 11. Place design in warm water. Just until the outside ¼ inch of stabilizer has dissolved.
- 12. Remove from water and blot design on a paper towel.
- 13. The wings need to be bent upward, so bend them upward and put them aside to dry. You can use a clip on the bottom of the body to hold the wings in place.
- 14. Repeat the steps 1-13 for the bottom butterfly (NLSEE1810-4x4).
- 15. Once both butterfly parts are dry, connect the two parts with a drop of hot glue. Press in place. Your butterfly is complete.



